

Instruction for the 32" digital picture frame reticulating arm wall mount with braces

Both braces lay vertical (top to bottom of the frame) resting into the grooves; the braces support the reticulating arm.

Visual Reference of Parts

- A. Brace [complete gadget] Amount: 2 pieces
- B. Bar [braces without security clips, screws, and washers] Amount: 2 pieces
- C. Reticulating Arm's Support [**Optional—only with our wall mount**] Amount: 1 piece
- D. Security clip [placed at the end of the bars] Amount: 4 pieces
- E. Screw [separate of the Reticulation Arm package] Amount: 8 pieces
- F. Washer [separate of the Reticulation Arm package] Amount: 8 pieces



Back of the frame, there is a groove surrounding the edges, which is used to support our reticulating arm braces, flat track wall mount, or the angled track wall mount.

Instructions

1. With the frame carefully placed screen side down on a clean, flat surface, remove the exterior four screws, then slide the security clips into the groove.
2. Place back each washer and screw, then tighten into the brace with all four exterior screws.
3. Remove four middle screws and washers. Place the reticulating arm's support (or the wall mount being used if different than our wall mount kit) against the brace, then place back the four middle screws and washers.
4. Center the reticulating arm's support (on our wall mount, face the cylindrical metal teeth left) before tightening security clips into grooves.
5. Tighten all screws.

End Product



Braces without our wall mount



Braces with our Reticulating Arm Wall Mount